


SERIES 600 DECK SYSTEM

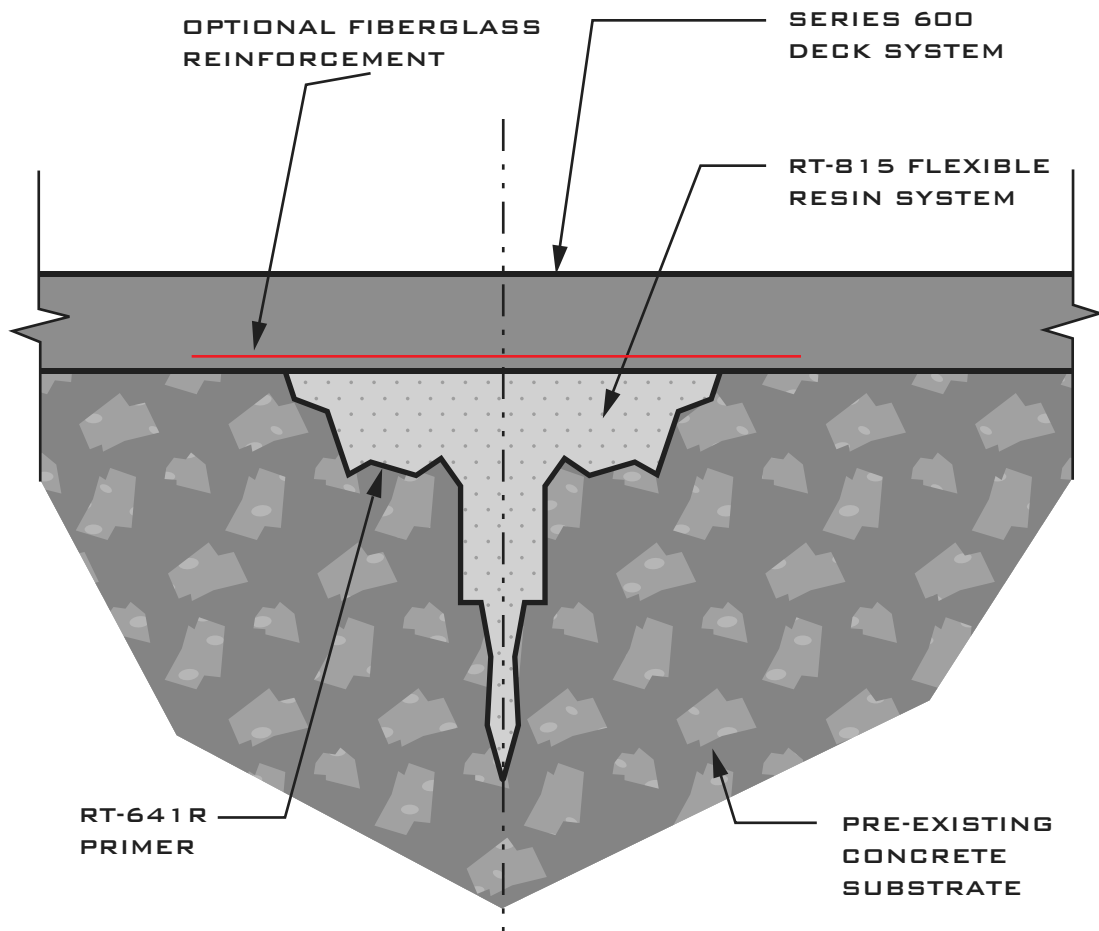

PROCESSES:

1. OPEN CRACK OR JOINT VIA CHIPPING AND/OR SAW CUTTING
2. PRIMING OF EXISTING CONCRETE
3. FILL CRACK OR JOINT WITH RT-815 FLEXIBLE RESIN SYSTEM
4. IF REQUIRED EMBEDDED FIBERGLASS MAT IN RT-815 EXTENDED 2" BEYOND CRACK
5. INSTALLATION OF DECK SYSTEM

* CONTROL JOINTS 1/2" WIDTH OR LESS