


PUR-GUARD FLOOR SYSTEM

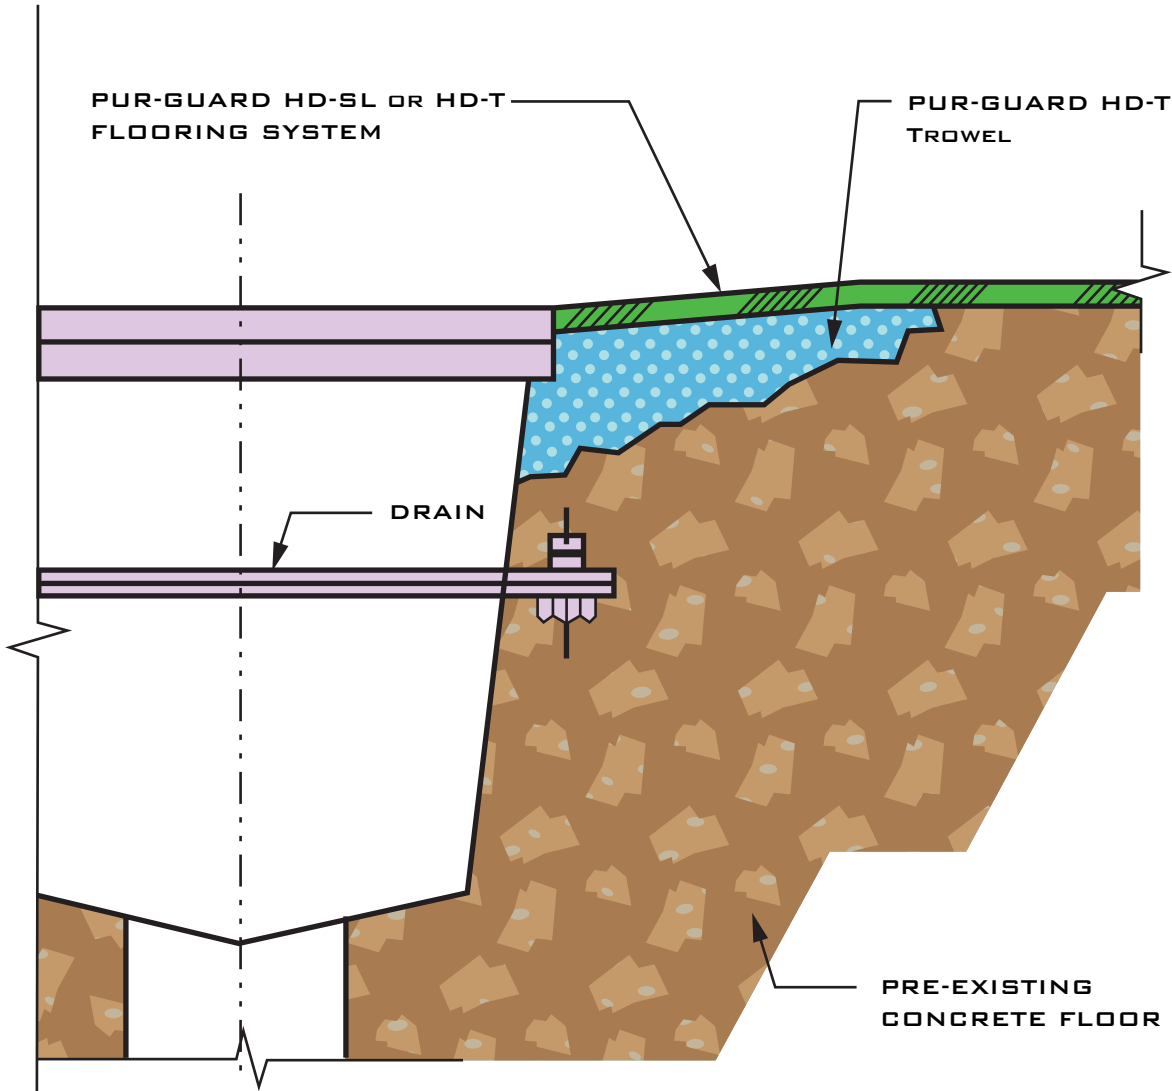

PROCESSES:

- 1. CHIP OUT CONCRETE 1/2" - 1" DEPTH AND CURTAIL 4" - 6" BACK
- 2. FILL WITH RES-TEK PUR-GUARD HD-T TO WITHIN 3/16" - 3/8" OF TOP OF EXISTING DRAIN
- 3. FINISH WITH RES-TEK PUR-GUARD FLOORING FLUSH TO DRAIN TOP