


**MAC-Guard**<sup>™</sup>  
Acrylic Flooring System

**ACRYLIC FLOORING SYSTEM**

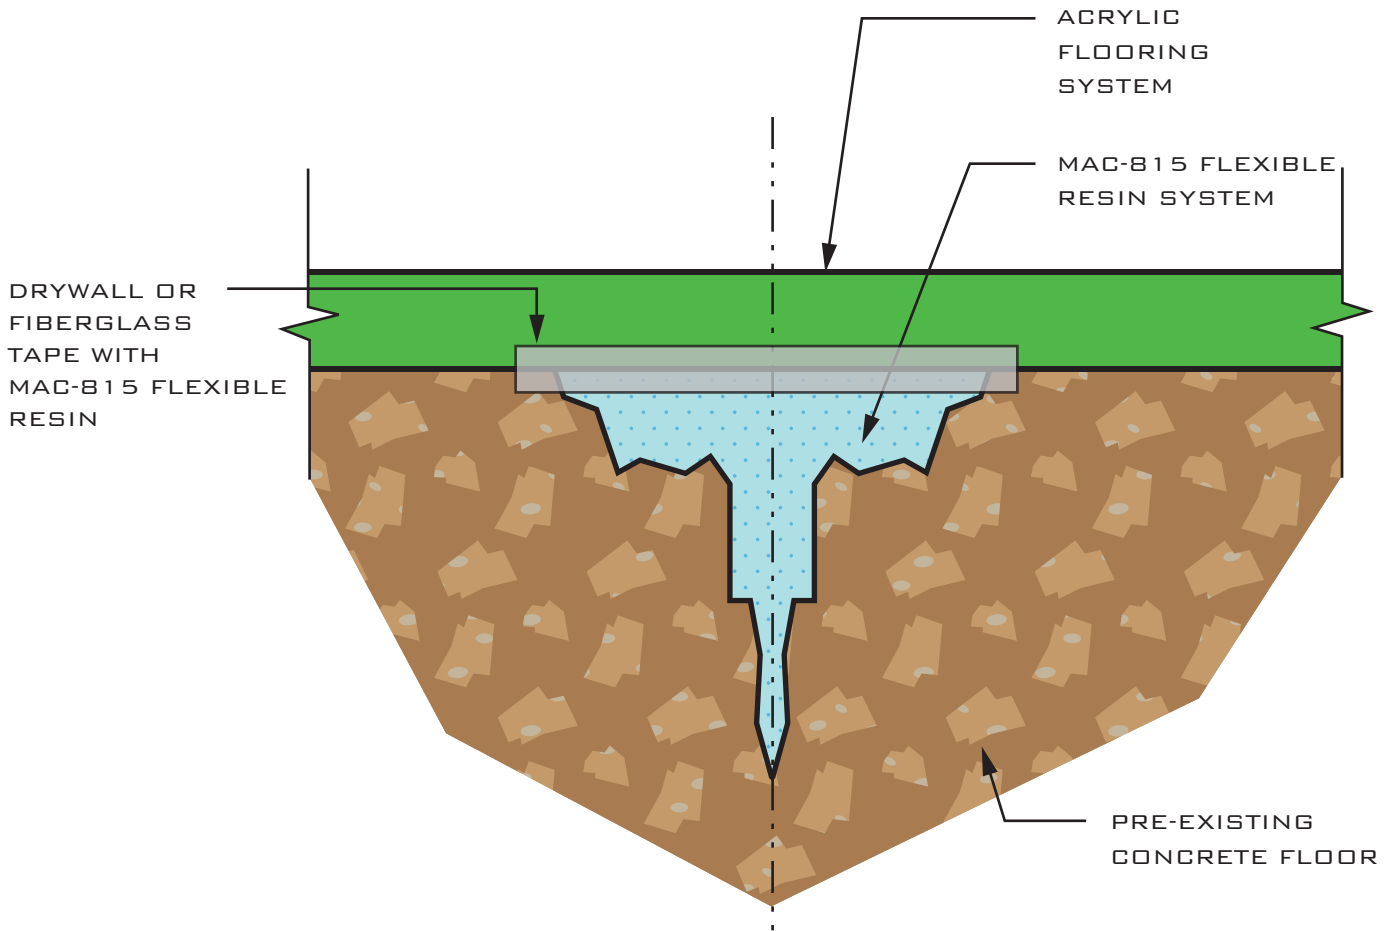

PROCESSES:

1. OPEN CRACK OR JOINT VIA CHIPPING AND/OR SAW CUTTING
2. PRIMING OF EXISTING CONCRETE
3. FILL CRACK OR JOINT WITH MAC-815 FLEXIBLE RESIN AND ADD DRYWALL OR FIBERGLASS TAPE
4. INSTALLATION OF ACRYLIC FLOORING SYSTEM

FIGURE **D.1A**

**CONTROL JOINT / CRACK REPAIR**

NOT TO SCALE